	d Serial Range all (When equipped with 40-113);	<u>Part</u> WH-	Number kT-2	Replaces	<u>Location</u> Main Wheel
	all (When equipped with 40-97A);	WH-			Main Wheel
1	all (When equipped with D-30660-1)		3.1		Main Wheel
					Main Wheel
	all (When equipped with 40-113);	WH-I			Main Wheel
	all (When equipped with 40-97A);				Main Wheel
	all (When equipped with D-30660-1)			. '	
,	11A) s/n all (When equipped with 40-				Main Wheel
·	11A) s/n all (When equipped with 40-	•			Main Wheel
172F (T-4 D-30660-	I1A) s/n all (When equipped with 1);	WH-I	₹1- 5		Main Wheel
172G (T-4	41A) s/n all (When equipped with 40-	-113); WH-I	KT-2		Main Wheel
172G (T-4	41A) s/n all (When equipped with 40	-97A); WH-I	⟨T - 2		Main Wheel
172G (T-4 D-30660-	41A) s/n all (When equipped with 1);	WH-I	KT-5		Main Wheel
172H (T-4	11A) s/n all (When equipped with 40-	-113); WH-ł	<t-2< td=""><td>9</td><td>Main Wheel</td></t-2<>	9	Main Wheel
	11A) s/n all (When equipped with 40-		KT-2		Main Wheel
172H (T-4 D-30660-	11A) s/n all (When equipped with 1);	WH-k	(T-5		Main Wheel
172l s/n a	ıll (When equipped with 40-113);	WH-ł	(T-2		Main Wheel
	III (When equipped with 40-97A);	WH-ł	(T-2		Main Wheel
	III (When equipped with D-30660-1);	WH-F	(T-5		Main Wheel
172K (T-4	IA) s/n all (When equipped with 40-	113); WH-ł	(T-2		Main Wheel
	11A) s/n all (When equipped with 40-				Main Wheel
1 '	11A) s/n all (When equipped with	WH-k	(T-5		Main Wheel
172L s/n a	all (When equipped with 40-113);	WH-P	(T-2		Main Wheel
172L s/n a	all (When equipped with 40-97A);	WH-r	(T-2		Main Wheel
172L s/n a	all (When equipped with D-30660-1);	WH-k	(T-5	<u>n indign</u> ija kan kan en	Main Wheel
172M* s/r with 40-11	n 17260759 thru 17263458 (When ed 13);	quipped WH-k	(T-2		Main Wheel
1	17260759 thru 17263458 (When ed	quipped WH-k	(T-2		Main Wheel
	17260759 thru 17263458 (When ed	quipped WH-k	(T-5		Main Wheel
172M* s/n with 40-11	17263459 thru 17267584 (When ed	quipped WH-k	(T-2		Main Wheel
	17263459 thru 17267584 (When ed	quipped WH-k	(T-34	_	Aux Wheel
			Project Engineer: Date: Engineering Manager:	Qualcula pager: Qualcula pager: Date: Manufacturing Man	1 5-23-12
		,	Date: Date:	_ 5/20/12 Date: *	5-24-12 McFarlane Aviation, Inc.
			MC	Fariane •	696 East 1700 Road Baldwin City, Kansas 66006
			Title:	Wheel Seal Sales Kit R	Reference
			Size: A Scale:	NA Drawn: ScottD	Sheet: 1 of 30
, I ne	/17/2012 SEE REVISIO	N SHEFT	Drawing Number:		REVISION
	/17/2012 SEE REVISIO			6666	-
			1		Α

ev Model and Serial Range 172M* s/n 17263459 thru 17267584 (When equipped with D-30291-6);	Part Number Replaces WH-KT-5	<u>Location</u> Main Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30500);	WH-KT-35	Aux Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30580);	WH-KT-5	Main Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30660-1);	WH-KT-5	Main Wheel
172N s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
172N s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
172N s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
172N s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
172N s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
172N s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
172P s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
172P s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
172P s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
172P s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
172P s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
172P s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
172Q s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
172Q s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
172Q s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
172Q s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
172Q s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
172Q s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
172R s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
172R s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
172RG s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
172RG s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
172RG s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
172RG s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
172S s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
172S s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
F172D s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172D s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172D s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel



w Model and Serial Range F172E s/n all (When equipped with 40-113);	Part Number Replaces WH-KT-2	<u>Location</u> Main Wheel
F172E s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172E s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172F s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172F s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172F s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172G s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172G s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172G s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-113);	WH-KT-2	Main Wheel
F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172H* s/n F17200655 thru F17200754 (When equipped with 40-113);	WH-KT-2	Main Wheel
F172H* s/n F17200655 thru F17200754 (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172K s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172K s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172K s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172L s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172L s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172L s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172M* s/n F17200905 thru F17201234 (When equipped with 40-113);	WH-KT-2	Main Wheel
F172M* s/n F17200905 thru F17201234 (When equipped with 40-97A);	WH-KT-2	Main Wheel
F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with 40-113);	WH-KT-2	Main Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with 40-77);	WH-KT-34	Aux Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with D-30291-6);	WH-KT-5	Main Wheel

		M	c F	arla	ne	696 E	rlane Avi ast 1700 vin City,	Road		06
Title:			w	heel Sea	ıl Sales Ki	t Refe	erence	•		
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	3	of	30
Drawin	ng Numbe	r:		6666	5				F	REVISION A

Rev Model and Serial Range F172M* s/n F17201235 thru F17201514 (When equipped with D-30500);	<u>Part Number</u> <u>Replaces</u> WH-KT-35	<u>Location</u> Aux Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with D-30580);	WH-KT-5	Main Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172N s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172N s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
F172N s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
F172N s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
F172N s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
F172N s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F172P s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F172P s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
F172P s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
F172P s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
F172P s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
F172P s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FP172 s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FP172 s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
FP172 s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FR172E s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FR172E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FR172E s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR172E s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
FR172E s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
FR172E s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FR172F s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FR172F s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FR172F s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR172F s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
FR172F s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
FR172F s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FR172G s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FR172G s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FR172G s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR172G s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel



Rev Model and Serial Range FR172G s/n all (When equipped with D-30500);	<u>Part Number</u> <u>Re</u> WH-KT-35	<u>Location</u> Aux Wheel
FR172G s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FR172H s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FR172H s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FR172H s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR172H s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
FR172H s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
FR172H s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FR172J s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FR172J s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FR172J s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR172J s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
FR172J s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
FR172J s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
FR172K s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
FR172K s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR172K s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
FR172K s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
FR172K s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
P172D s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
P172D s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
P172D s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
R172E (T-41B,C,D) s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
R172E (T-41B,C,D) s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
R172E (T-41B,C,D) s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
R172F (T-41D) s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
R172F (T-41D) s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
R172F (T-41D) s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
R172G (T-41C,D) s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
R172G (T-41C,D) s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
R172G (T-41C,D) s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
R172H (T-41D) s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel

	-	M	c Fa	arla	ne	696	arlane Av East 1700 Iwin City,	Road)6
Title:			W	heel Sea	l Sales Ki	t Ref	erence	2		
Size:	А	Scale:	NA	Drawn:	ScottD		Sheet:	5	of	30
Drawin	ng Numbe	r:		-			_		F	REVISION
				6666	<u> </u>				l	
										Α

Rev Model and Serial Range	Part Number	Replaces	<u>Location</u>
R172H (T-41D) s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
R172H (T-41D) s/n all (When equipped with 40-97A);	WH-KT-2		Main Wheel
R172K s/n all (When equipped with 40-113);	WH-KT-2		Main Wheel
R172K s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
R172K s/n all (When equipped with D-30291-6);	WH-KT-5		Main Wheel
R172K s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
R172K s/n all (When equipped with D-30660-1);	WH-KT-5		Main Wheel
177 s/n all (When equipped with 40-113);	WH-KT-2		Main Wheel
177 s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
177 s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
177 s/n all (When equipped with 40-97A);	WH-KT-2		Main Wheel
177 s/n all (When equipped with D-30291-6);	WH-KT-5		Main Wheel
177 s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
177 s/n all (When equipped with D-30580);	WH-KT-5		Main Wheel
177 s/n all (When equipped with D-30660-1);	WH-KT-5		Main Wheel
177A s/n all (When equipped with 40-113);	WH-KT-2		Main Wheel
177A s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
177A s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
177A s/n all (When equipped with 40-97A);	WH-KT-2		Main Wheel
177A s/n all (When equipped with D-30291-6);	WH-KT-5		Main Wheel
177A s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
177A s/n all (When equipped with D-30580);	WH-KT-5		Main Wheel
177A s/n all (When equipped with D-30660-1);	WH-KT-5		Main Wheel
177B s/n all (When equipped with 40-113);	WH-KT-2		Main Wheel
177B s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
177B s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
177B s/n all (When equipped with 40-97A);	WH-KT-2		Main Wheel
177B s/n all (When equipped with D-30291-6);	WH-KT-5		Main Wheel
177B s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
177B s/n all (When equipped with D-30580);	WH-KT-5		Main Wheel
177B s/n all (When equipped with D-30660-1);	WH-KT-5		Main Wheel
177RG s/n all (When equipped with 40-113);	WH-KT-2		Main Wheel
177RG s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
177RG s/n all (When equipped with D-30291-6);	WH-KT-5		Main Wheel
177RG s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
177RG s/n all (When equipped with D-30580);	WH-KT-5		Main Wheel



Rev Model and Serial Range 177RG s/n all (When equipped with D-30660-1);	Part Number Replaces WH-KT-5	<u>Location</u> Main Wheel
F177RG s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F177RG s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
F177RG s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
F177RG s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
F177RG s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
F177RG s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
180 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
180A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
180B s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
180C s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
180D s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
180E s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
180F s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
180F s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
180F s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
180F s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
180F s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
180G s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
180G s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
180G s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
180G s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
180G s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
180H s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
180H s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
180H s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
180H s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
180H s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with 40-32);	WH-KT-8	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with 40-75B);	WH-KT-3	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with 40-75D);	WH-KT-3	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with D-30291-1);	WH-KT-5	Main Wheel



Rev Model and Serial Range 180J* s/n 18052285 thru 18052384 (When equipped with D-30291-3);	Part Number Replaces WH-KT-5	<u>Location</u> Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with 40-75B);	WH-KT-3	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with 40-75D);	WH-KT-3	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30291-1);	WH-KT-5	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30291-2);	WH-KT-5	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30291-3);	WH-KT-5	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30660-3);	WH-KT-5	Main Wheel
180K s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
180K s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
180K s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
180K s/n all (When equipped with D-30291-2);	WH-KT-5	Main Wheel
180K s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
180K s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
182 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182B s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182C s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182D s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182E s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182E s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182E s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182E s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182E s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182E s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182F s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182F s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182F s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182F s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182F s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182F s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel



Rev Model and Serial Range	Part Number Replaces	<u>Location</u>
182F s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182G s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182G s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182G s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182G s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182G s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182G s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182G s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182H s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182H s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182H s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182H s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182H s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182H s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182H s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182J s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182J s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182J s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182J s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182J s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182J s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182J s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182K s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182K s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182K s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182K s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182K s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182K s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182K s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182L s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182L s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182L s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182L s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182L s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182L s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182L s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel



 Model and Serial Range 182M s/n all (When equipped with 40-113); 	Part Number Replaces WH-KT-2	<u>Location</u> Main Wheel
182M s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182M s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182M s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182M s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182M s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182M s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182N s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182N s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
182N s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182N s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182N s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182N s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
182N s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-113);	WH-KT-2	Main Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-55);	WH-KT-38	Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-76A);	WH-KT-39	Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-76B);	WH-KT-42	Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-77);	WH-KT-34	Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-97A);	WH-KT-2	Main Wheel
182P* s/n 18260826 thru 18262465 (When equipped with D-30500);	WH-KT-35	Aux Wheel
182P* s/n 18262466 thru 18265175 (When equipped with 40-113);	WH-KT-2	Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with 40-77);	WH-KT-34	Aux Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30291-6);	WH-KT-5	Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30500);	WH-KT-35	Aux Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30580);	WH-KT-5	Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30660-1);	WH-KT-5	Main Wheel



Rev Model and Serial Range 182P* s/n 18262466 thru 18265175 (When equipped with D-30660-3);	<u>Part Number</u> <u>Replaces</u> WH-KT-5	<u>Location</u> Main Wheel
182Q s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182Q s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182Q s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
182Q s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182Q s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
182Q s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
182Q s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
182R s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
182R s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182R s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
182R s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
182R s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
182R s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
182R s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
182S s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
182S s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
182T s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
182T s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
A182J s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
A182J s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
A182J s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
A182J s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
A182J s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
A182J s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
A182J s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
A182K s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
A182K s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
A182K s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
A182K s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
A182K s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
A182K s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
A182K s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
A182L s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
A182L s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel



Rev Model and Serial Range A182L s/n all (When equipped with 40-76A);	<u>Part Number</u> <u>Replaces</u> WH-KT-39	<u>Location</u> Aux Wheel
A182L s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
A182L s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
A182L s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
A182L s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
A182N s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
A182N s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
A182N s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
A182N s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
A182N s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
A182N s/n all (When equipped with 40-97A);	WH-KT-2	Main Wheel
A182N s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
F182P s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F182P s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
F182P s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
F182P s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
F182P s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
F182P s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F182P s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
F182Q s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
F182Q s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
F182Q s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
F182Q s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
F182Q s/n all (When equipped with D-30580);	WH-KT-5	Main Wheel
F182Q s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
F182Q s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
FR182 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
FR182 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
FR182 s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
R182 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
R182 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
R182 s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
T182 s/n all (When equipped with 40-113);	WH-KT-2	Main Wheel
T182 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
T182 s/n all (When equipped with D-30291-6);	WH-KT-5	Main Wheel
T182 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel



ev Model and Serial Range T182 s/n all (When equipped with D-30580);	Part Number Replaces WH-KT-5	<u>Location</u> Main Wheel
T182 s/n all (When equipped with D-30660-1);	WH-KT-5	Main Wheel
T182 s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
T182T s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
T182T s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TR182 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TR182 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TR182 s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
185 s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
185 s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
185 s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
185 s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
185 s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
185A s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
185A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
185A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
185A s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
185A s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
185B s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
185B s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
185B s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
185B s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
185B s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
185C s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
185C s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
185C s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
185C s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
185C s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
185D s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
185D s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
185D s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
185D s/n all (When equipped with D-30291-1);	WH-KT-5	Main Wheel
185D s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
185E s/n all (When equipped with 40-32);	WH-KT-8	Main Wheel
185E s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
185E s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel



Model and Serial Range 185E s/n all (When equipped with D-30291-1);	<u>Part Number</u> <u>Replaces</u> WH-KT-5	<u>Location</u> Main Wheel
185E s/n all (When equipped with D-30291-3);	WH-KT-5	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with 40-32);	WH-KT-8	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with 40-75B);	WH-KT-3	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with 40-75D);	WH-KT-3	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with D-30291-1);	WH-KT-5	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with D-30291-3);	WH-KT-5	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with 40-32);	WH-KT-8	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with 40-75B);	WH-KT-3	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with 40-75D);	WH-KT-3	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with D-30291-1);	WH-KT-5	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with D-30291-3);	WH-KT-5	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with 40-32);	WH-KT-8	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with 40-75B);	WH-KT-3	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with 40-75D);	WH-KT-3	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with D-30291-1);	WH-KT-5	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with D-30291-3);	WH-KT-5	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with 40-75B);	WH-KT-3	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with 40-75D);	WH-KT-3	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with D-30291-1);	WH-KT-5	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with D-30291-2);	WH-KT-5	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with D-30291-3);	WH-KT-5	Main Wheel

McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006										
Title:	Wheel Seal Sales Kit Reference									
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	14	of	30
Drawin	Drawing Number: 6666						R	EVISION		
										А

Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
A185F* s/n 18502311 thru 18504448 (When equipped with D-30660-3);	WH-KT-5		Main Wheel
188 s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
188 s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
188 s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
188 s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
188A s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
188A s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
188A s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
188A s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
188B s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
188B s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
188B s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
188B s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
A188 s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
A188 s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
A188 s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
A188 s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
A188A s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
A188A s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
A188A s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
A188A s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-101);	WH-KT-22		Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-101A);	WH-KT-22		Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-75B);	WH-KT-3		Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-98A);	WH-KT-2		Main Wheel
A188B* s/n 18802349 thru 18803973 (When equipped with 40-101);	WH-KT-22		Main Wheel
A188B* s/n 18802349 thru 18803973 (When equipped with 40-98A);	WH-KT-2		Main Wheel
A-188B s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
A-188B s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
A-188B s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
A-188B s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel

McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006								
Wheel Seal Sales Kit Reference								
Size: A	Scale:	NA	Drawn:	ScottD	Sheet:	15	of	30
Drawing Numb	er:		6666)			F	REVISION

Rev Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-101);	WH-KT-22		Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-101A);	WH-KT-22		Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-75B);	WH-KT-3		Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-98A);	WH-KT-2		Main Wheel
A188B (w/ large hopper)* s/n 18802349T thru 18803973T (When equipped with 40-101);	WH-KT-22		Main Wheel
A188B (w/ large hopper)* s/n 18802349T thru 18803973T (When equipped with 40-98A);	WH-KT-2		Main Wheel
A-A188B s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
A-A188B s/n all (When equipped with 40-101A);	WH-KT-22		Main Wheel
A-A188B s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
A-A188B s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
T188C s/n all (When equipped with 40-101);	WH-KT-22		Main Wheel
T188C s/n all (When equipped with 40-98A);	WH-KT-2		Main Wheel
210-5 (205) s/n all (When equipped with 40-55);	WH-KT-38		Aux Wheel
210-5 (205) s/n all (When equipped with 40-67);	WH-KT-11		Main Wheel
210-5 (205) s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
210-5 (205) s/n all (When equipped with 40-76);	WH-KT-51		Aux Wheel
210-5 (205) s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
210-5 (205) s/n all (When equipped with 40-76B);	WH-KT-42		Aux Wheel
210-5 (205) s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
210-5A (205A) s/n all (When equipped with 40-55);	WH-KT-38		Aux Wheel
210-5A (205A) s/n all (When equipped with 40-67);	WH-KT-11		Main Wheel
210-5A (205A) s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
210-5A (205A) s/n all (When equipped with 40-76);	WH-KT-51		Aux Wheel
210-5A (205A) s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
210-5A (205A) s/n all (When equipped with 40-76B);	WH-KT-42		Aux Wheel
210-5A (205A) s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
206 s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
206 s/n all (When equipped with 40-75D);	WH-KT-3		Main Wheel
206 s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
206 s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
206 s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel



Rev Model and Serial Range 206 s/n all (When equipped with D-30665);	<u>Part Number</u> <u>Replaces</u> WH-KT-47	<u>Location</u> Aux Wheel
206H s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
206H s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
206H s/n all (When equipped with 40-75T);	WH-KT-3	Main Wheel
206H s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206 s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
P206 s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
P206 s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
P206 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P206 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
P206A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
P206A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
P206A s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
P206A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206A s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P206A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
P206B s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
P206B s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
P206B s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
P206B s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206B s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P206B s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
P206C s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
P206C s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
P206C s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
P206C s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206C s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P206C s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
P206D s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
P206D s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
P206D s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
P206D s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206D s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P206D s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
P206E s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel



Rev Model and Serial Range P206E s/n all (When equipped with 40-75D);	Part Number Replaces WH-KT-3	<u>Location</u> Main Wheel
P206E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
P206E s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
P206E s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P206E s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
T206H s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
T206H s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
T206H s/n all (When equipped with 40-75T);	WH-KT-3	Main Wheel
T206H s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TP206A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TP206A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TP206A s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TP206A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TP206A s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TP206A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TP206B s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TP206B s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TP206B s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TP206B s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TP206B s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TP206B s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TP206C s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TP206C s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TP206C s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TP206C s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TP206C s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TP206C s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TP206D s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TP206D s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TP206D s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TP206D s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TP206D s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TP206D s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TP206E s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TP206E s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TP206E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel



Rev Model and Serial Range TP206E s/n all (When equipped with 40-77);	<u>Part Number</u> <u>Replaces</u> WH-KT-34	<u>Location</u> Aux Wheel
TP206E s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TP206E s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206A s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206A s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206B s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206B s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206B s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206B s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206B s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206B s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206C s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206C s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206C s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206C s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206C s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206C s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206D s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206D s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206D s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206D s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206D s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206D s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206E s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206E s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206E s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206E s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206E s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with 40-75D);	WH-KT-3	Main Wheel



Rev Model and Serial Range TU206F* s/n U20601701 thru U20602199 (When	Part Number Replaces WH-KT-39	<u>Location</u> Aux Wheel
equipped with 40-76A); TU206F* s/n U20601701 thru U20602199 (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);	WH-KT-5	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30660-3);	WH-KT-5	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30665);	WH-KT-47	Aux Wheel
TU206G s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
TU206G s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
TU206G s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
TU206G s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
TU206G s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
TU206G s/n all (When equipped with D-30660-2);	WH-KT-5	Main Wheel
TU206G s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
TU206G s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
U206 s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
U206 s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
U206 s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
U206 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
U206 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
U206 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
U206A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
U206A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel

McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006										
Title:	Wheel Seal Sales Kit Reference									
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	20	of	30
Drawin	ng Numbe	r:		6666	5				F	REVISION

Rev Model and Serial Range	Part Number	Replaces	<u>Location</u>
U206A s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
U206A s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
U206A s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
U206A s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
U206B s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
U206B s/n all (When equipped with 40-75D);	WH-KT-3		Main Wheel
U206B s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
U206B s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
U206B s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
U206B s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
U206C s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
U206C s/n all (When equipped with 40-75D);	WH-KT-3		Main Wheel
U206C s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
U206C s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
U206C s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
U206C s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
U206D s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
U206D s/n all (When equipped with 40-75D);	WH-KT-3		Main Wheel
U206D s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
U206D s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
U206D s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
U206D s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
U206E s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
U206E s/n all (When equipped with 40-75D);	WH-KT-3		Main Wheel
U206E s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
U206E s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
U206E s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
U206E s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with 40-75B);	WH-KT-3		Main Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with 40-75D);	WH-KT-3		Main Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with 40-76A);	WH-KT-39		Aux Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with 40-77);	WH-KT-34		Aux Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with D-30500);	WH-KT-35		Aux Wheel



v Model and Serial Range	<u>Part Number</u> <u>Replaces</u>	<u>Location</u>
U206F* s/n U20601701 thru U20602199 (When equipped with D-30665);	WH-KT-47	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-75B);	WH-KT-3	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-75D);	WH-KT-3	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-76A);	WH-KT-39	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-77);	WH-KT-34	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30500);	WH-KT-35	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);	WH-KT-5	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-3);	WH-KT-5	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30665);	WH-KT-47	Aux Wheel
U206G s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
U206G s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
U206G s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
U206G s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
U206G s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
U206G s/n all (When equipped with D-30660-2);	WH-KT-5	Main Wheel
U206G s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
U206G s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
207 s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
207 s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
207 s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
207 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
207 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
207 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
207A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
207A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
207A s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
207A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
207A s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
207A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
T207 s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel

McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006									
Wheel Seal Sales Kit Reference									
Size: A	Scale:	NA	Drawn:	ScottD		Sheet:	22	of	30
Drawing Num	per:		6666	i				F	REVISION

w Model and Serial Range	Part Number Replaces	<u>Location</u>
T207 s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
T207 s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
T207 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
T207 s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
T207 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
T207A s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
T207A s/n all (When equipped with 40-75D);	WH-KT-3	Main Wheel
T207A s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
T207A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
T207A s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
T207A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
208 s/n all (When equipped with 40-177A);	WH-KT-42	Aux Wheel
208 s/n all (When equipped with 40-179);	WH-KT-42	Main Wheel
208A s/n all (When equipped with 40-177A);	WH-KT-42	Aux Wheel
208A s/n all (When equipped with 40-179);	WH-KT-42	Main Wheel
208B s/n all (When equipped with 40-177A);	WH-KT-42	Aux Wheel
208B s/n all (When equipped with 40-179);	WH-KT-42	Main Wheel
210 s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210A s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210B s/n all (When equipped with 40-68);	WH-KT-34	Aux Wheel
210B s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210B s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210C s/n all (When equipped with 40-68);	WH-KT-34	Aux Wheel
210C s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210C s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210D s/n all (When equipped with 40-68);	WH-KT-34	Aux Wheel
210D s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210D s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210E s/n all (When equipped with 40-68);	WH-KT-34	Aux Wheel
210E s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210E s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210F s/n all (When equipped with 40-68);	WH-KT-34	Aux Wheel
210F s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210F s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210G s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel



Rev Model and Serial Range 210G s/n all (When equipped with 40-77);	Part Number Replaces WH-KT-34	<u>Location</u> Aux Wheel
210H s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210H s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210J s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210J s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210K s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210K s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210K s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
210K s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
210L s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210L s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210L s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
210L s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
210M s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210M s/n all (When equipped with 40-77);	WH-KT-34	Aux Wheel
210M s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
210M s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel
210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);	WH-KT-3	Main Wheel
210N* s/n 21062955 thru 21064135 (When equipped with 40-77);	WH-KT-34	Aux Wheel
210N* s/n 21062955 thru 21064135 (When equipped with D-30500);	WH-KT-35	Aux Wheel
210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);	WH-KT-5	Main Wheel
210N* s/n 21064136 thru 21064897 (When equipped with 40-142);	WH-KT-2	Main Wheel
210N* s/n 21064136 thru 21064897 (When equipped with 40-75B);	WH-KT-3	Main Wheel
210N* s/n 21064136 thru 21064897 (When equipped with D-30500);	WH-KT-35	Aux Wheel
210R s/n all (When equipped with 40-142);	WH-KT-2	Main Wheel
210R s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
210R s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P210N s/n all (When equipped with 40-142);	WH-KT-2	Main Wheel
P210N s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
P210N s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
P210N s/n all (When equipped with D-30660-3);	WH-KT-5	Main Wheel

McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006										
Title:	Wheel Seal Sales Kit Reference									
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	24	of	30
Drawin	Drawing Number: 6666						F	REVISION		
				0000	,					Α

Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
P210R s/n all (When equipped with 40-142);	WH-KT-2		Main Wheel
P210R s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
P210R s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
P210R s/n all (When equipped with D-30660-3);	WH-KT-5		Main Wheel
T210F s/n all (When equipped with 40-68);	WH-KT-34		Aux Wheel
T210F s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210F s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210G s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210G s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210H s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210H s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210J s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210J s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210K s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210K s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210K s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
T210K s/n all (When equipped with D-30660-3);	WH-KT-5		Main Wheel
T210L s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210L s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210L s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
T210L s/n all (When equipped with D-30660-3);	WH-KT-5		Main Wheel
T210M s/n all (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210M s/n all (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210M s/n all (When equipped with D-30500);	WH-KT-35		Aux Wheel
T210M s/n all (When equipped with D-30660-3);	WH-KT-5		Main Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);	WH-KT-3		Main Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with 40-77);	WH-KT-34		Aux Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with D-30500);	WH-KT-35		Aux Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);	WH-KT-5		Main Wheel
T210N* s/n 21064136 thru 21064897 (When equipped with 40-142);	WH-KT-2		Main Wheel
T210N* s/n 21064136 thru 21064897 (When equipped with 40-75B);	WH-KT-3		Main Wheel



Rev Model and Serial Range T210N* s/n 21064136 thru 21064897 (When equipped with D-30500);	Part Number Replaces WH-KT-35	<u>Location</u> Aux Wheel
T210R s/n all (When equipped with 40-142);	WH-KT-2	Main Wheel
T210R s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
T210R s/n all (When equipped with D-30500);	WH-KT-35	Aux Wheel
T303 s/n all (When equipped with 40-142);	WH-KT-2	Main Wheel
T303 s/n all (When equipped with 40-98H);	WH-KT-2	Main Wheel
310R s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
310R s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
T310R s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
T310R s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
335 s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
335 s/n all (When equipped with 40-40D);	WH-KT-28	Main Wheel
336 s/n all (When equipped with 40-55);	WH-KT-38	Aux Wheel
336 s/n all (When equipped with 40-67);	WH-KT-11	Main Wheel
336 s/n all (When equipped with 40-75B);	WH-KT-3	Main Wheel
336 s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
336 s/n all (When equipped with 40-76B);	WH-KT-42	Aux Wheel
337 s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337 s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337A (USAF O2B) s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337A (USAF O2B) s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337B s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337B s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337C s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337C s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337D s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337D s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337E s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337E s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
337F s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337F s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337F s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel



v Model and Serial Range	Part Number Replaces	<u>Location</u>
337G s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337G s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337G s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
337G s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
337H s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
337H s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
337H s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
337H s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
F337E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
F337E s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
F337E s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
F337F s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
F337F s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
F337F s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
F337G s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
F337G s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
F337G s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
F337G s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
F337H s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
F337H s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
F337H s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
F337H s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
FT337E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FT337E s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
FT337E s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
FT337F s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
FT337F s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
FT337F s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
M337B (USAF O2A) s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
M337B (USAF O2A) s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
T337B s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
T337B s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
T337C s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
T337C s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel



Rev Model and Serial Range T337D s/n all (When equipped with 40-76A);	Part Number Replaces WH-KT-39	<u>Location</u> Aux Wheel
T337D s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
T337E s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
T337E s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
T337E s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
T337F s/n all (When equipped with 40-76A);	WH-KT-40	Aux Wheel
T337F s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
T337F s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
T337H s/n all (When equipped with 40-76A);	WH-KT-39	Aux Wheel
T337H s/n all (When equipped with 40-96E);	WH-KT-2	Main Wheel
T337H s/n all (When equipped with 40-98A);	WH-KT-2	Main Wheel
T337H s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
340 s/n all (When equipped with 40-140A);	WH-KT-39	Aux Wheel
340 s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
340 s/n all (When equipped with 40-40D);	WH-KT-28	Main Wheel
340 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
340A s/n all (When equipped with 40-140A);	WH-KT-39	Aux Wheel
340A s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
340A s/n all (When equipped with 40-40D);	WH-KT-28	Main Wheel
340A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
401 s/n all (When equipped with 40-135A);	WH-KT-28	Main Wheel
401 s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
401 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
401A s/n all (When equipped with 40-135A);	WH-KT-28	Main Wheel
401A s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
401A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
401B s/n all (When equipped with 40-135A);	WH-KT-28	Main Wheel
401B s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
401B s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
402 s/n all (When equipped with 40-135A);	WH-KT-28	Main Wheel
402 s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
402 s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
402A s/n all (When equipped with 40-135A);	WH-KT-28	Main Wheel
402A s/n all (When equipped with 40-40A);	WH-KT-28	Main Wheel
402A s/n all (When equipped with D-30665);	WH-KT-47	Aux Wheel
402B s/n all (When equipped with 40-135A);	WH-KT-28	Main Wheel



Rev Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
402B s/n all (When equipped with 40-40A);	WH-KT-28		Main Wheel
402B s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
402C s/n all (When equipped with 40-135A);	WH-KT-28		Main Wheel
402C s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
404 s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
404 s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
406 s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
F406* s/n F406-0001 thru F406-9999 (When equipped with 40-140A);	WH-KT-39		Aux Wheel
411 s/n all (When equipped with 40-40A);	WH-KT-28		Main Wheel
411 s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
411A s/n all (When equipped with 40-40A);	WH-KT-28		Main Wheel
411A s/n all (When equipped with 40-76A);	WH-KT-39		Aux Wheel
414 s/n all (When equipped with 40-135A);	WH-KT-28		Main Wheel
414 s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
414 s/n all (When equipped with 40-40A);	WH-KT-28		Main Wheel
414 s/n all (When equipped with 40-40D);	WH-KT-28		Main Wheel
414 s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
414A s/n all (When equipped with 40-135A);	WH-KT-28		Main Wheel
414A s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
414A s/n all (When equipped with 40-40A);	WH-KT-28		Main Wheel
414A s/n all (When equipped with 40-40D);	WH-KT-28		Main Wheel
414A s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
421 s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
421A s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
421B s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
421C s/n all (When equipped with 40-135A);	WH-KT-28		Main Wheel
421C s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
421C s/n all (When equipped with D-30665);	WH-KT-47		Aux Wheel
425 s/n all (When equipped with 40-138A);	WH-KT-17		Main Wheel
425 s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel
441 s/n all (When equipped with 40-140A);	WH-KT-39		Aux Wheel



"MC" prefix denotes McFarlane Aviation, Inc. manufactur	re				
eport Generated: 5/24/2012 11:18:34AM					
		<i>lcFarla</i>	ne	McFarlane Aviati 696 East 1700 R Baldwin City, Ka	oad
	Title:	Wheel Seal Sales Kit Reference			
	Size: A Scale	e: NA Drawn:	ScottD	Sheet:	30 of 3
	Size: A Scale Drawing Number:	e: NA Drawn:		Sheet:	30 of 3

Part Number

Replaces

Location

Rev Model and Serial Range