

Includes:

- 1 – Slim Grip Ultra Pro Tablet Holder with Support Legs (TAB006AMPSXL)
- 1 – Windshield Suction Base with 25mm Ball (SPRM081)
- 1 – Robust™ Series 2.75 inch Shaft Arm (SP-RMS250)
- 1 – Metal 4-Hole AMPS to 25mm Ball Adapter (APMAMPS25MM)

IMPORTANT:

To ensure a secure and stable installation, clean the mounting surface area thoroughly by removing all grease, dirt, and debris.


Please note the tablet holder hardware specifications:

4 - M4 x 12mm Screws (Included)

1

Install the AMPS adapter plate to the tablet holder


Align the AMPS 4-hole adapter on the back of the tablet holder. Then, insert the four mounting screws through the AMPS 4-hole ball adapter plate and into the tablet holder. Finally, secure the screws tightly.

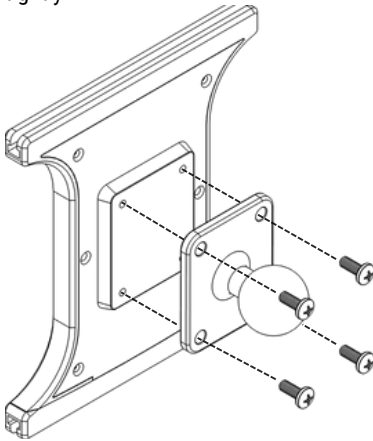

3

Install the suction cup on surface


Install the suction cup base on a clean, dry, flat surface using provided alcohol pad. Remove protective film, press suction cup firmly, and secure by flipping the lever down.

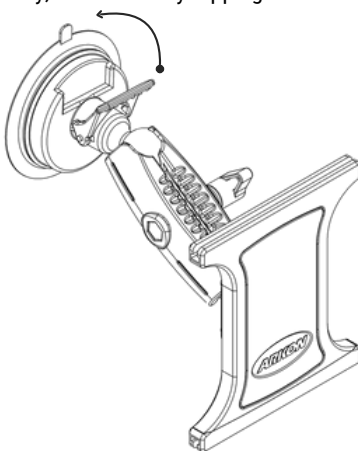

2

Assemble the components


Locate the 2.75" shaft and turn to the adjustment knob counterclockwise to expand. Insert the 25mm ball ends into the shaft. Turn clockwise to tighten.

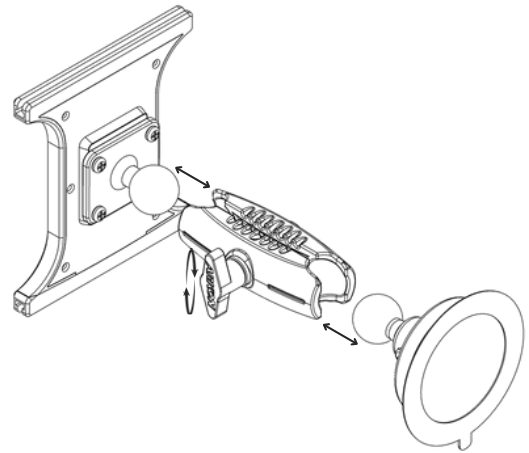

4

Tighten the 2.75" shaft to secure your desired position

Once the suction base is secured, tighten the shaft to stabilize the desired position of the mount.

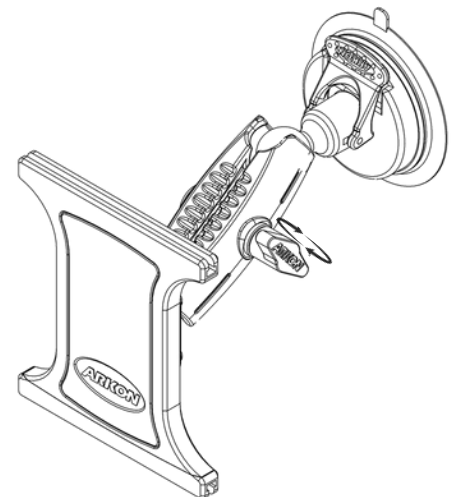

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING


Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation

Continued on page 2




5 Install the legs onto the holder

Place the support legs as recommended. Then, insert the support legs into the designated channels on the holder.

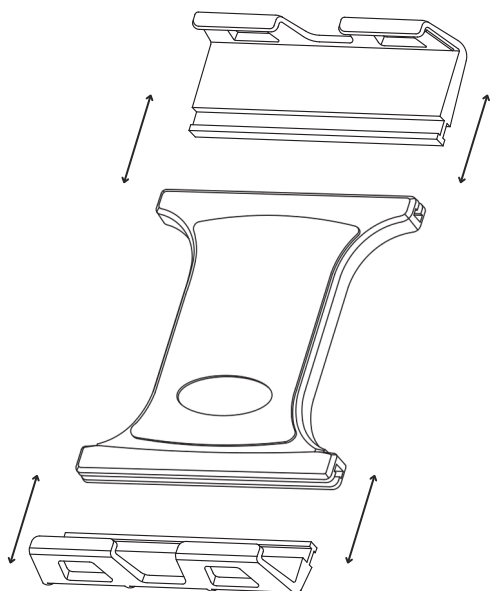

6 Install tablet to ensure proper fit

Apply downward pressure with the tablet to extend the legs using the spring-loaded mechanism. Then, confirm that the tablet fits securely in the holder without any loose movement.

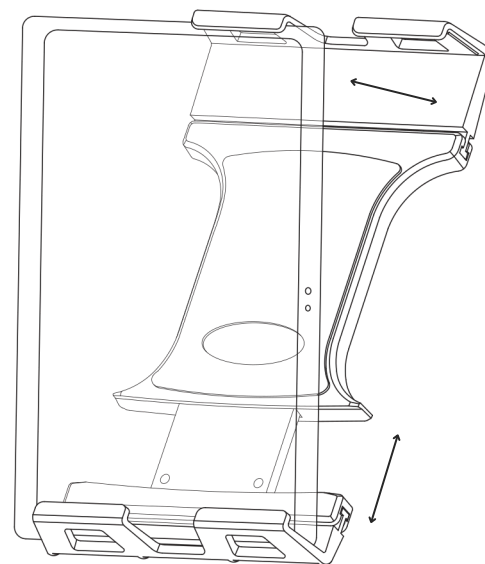

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

